


# Installation

## Ball Valve/Handle Prepack—Part No. S30-072/S30-072B Handle Kit—Part No. S30-087

### Installation procedure

1. Shut OFF main source of water before beginning.
2. Remove nut from valve stem.
3. Install flag handle and lockwasher.
4. Replace nut and tighten securely.

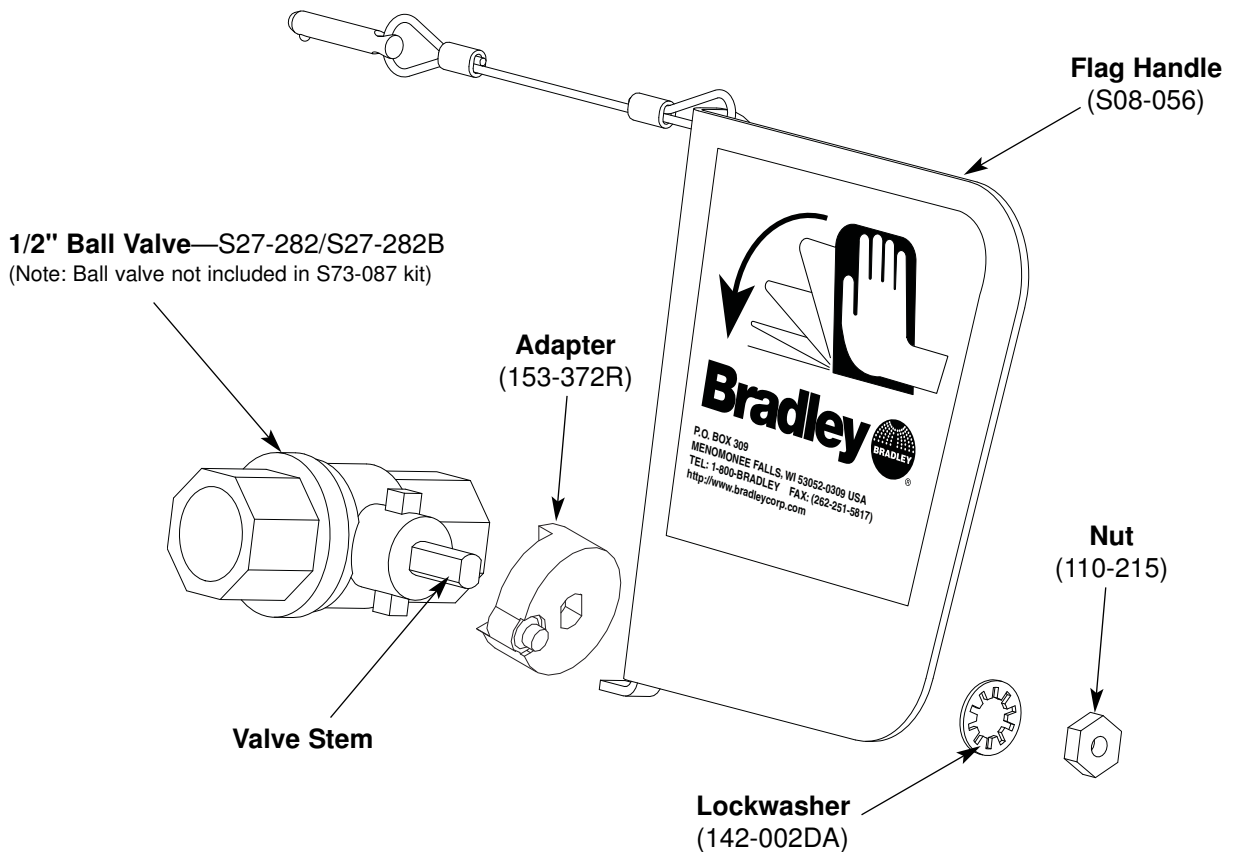

## [Bradley S19-220DCSS Stainless Steel Eye-Face Wash & Dust Cover](#)